

Assembly Instructions

6

Preparations for assembly

Check that ducts and fittings to be used in the system are undamaged. Do not use ducts or fittings that have been damaged in such a way that they jeopardize the air tightness or structural strength of the system.

Store ducts and fittings in a well-ordered and weatherproof storage area to minimize the risk of damage.

Cut ducts at right angles. Carefully remove any burrs from cut edges. Installation is easier and the risk of injury is reduced if there are no burrs.

Assembly


Start by inserting the turned-over edge of the fitting into the duct.

Push the end of the fitting into the duct. Turning the fitting slightly aids insertion. (Removal, if necessary, is also aided by turning.)


Secure the fitting in the duct using self-tapping screws or airtight pop rivets.

Placement of the fastening screws should be opposite from one another evenly spaced around the circumference, much like the procedure for tightening lug nuts on a tire (see diagram). Start where the distance between the duct and the fitting is largest. Screws should be placed approximately 1/2" from the bead. In the event of incorrect installation, holes caused by screws or pop rivets must be sealed before reassembly.

Quantities and sizes to be used are listed in the below table.

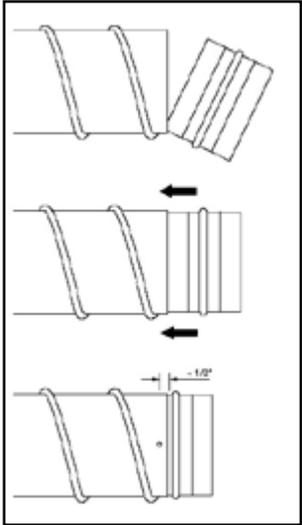

Duct Dia. (inch)	Screw Dia. (inch)	Quantity
3 - 5	1/8	2
6 - 10	1/8	3
12 - 24	1/8	4
26 - 50	1/8	6
52 - 60	1/8	8

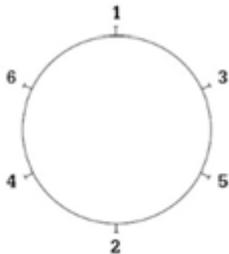

Always start the first fastener at the largest radial gap between fitting and duct. Be sure to achieve even distribution around the circumference.

Carefully seal any holes left by measurements, removed screws, pop rivets, etc.